



Telcōma
AUTOMATIONS

CCL-VK / VCK



TECHNICAL MANUAL

PACK CONTENTS

- 1 x Monitor (VK1- Mono, VCK1- Colour)
- 1 x Outdoor Panel (Camera, Speaker, Call Button and Keypad)
- 1 x Power Supply
- 1 x Bracket
- 1 x Fixing Kit and cables
- 1 x Instruction Manual

Internal Monitor Connections

Outdoor Panel

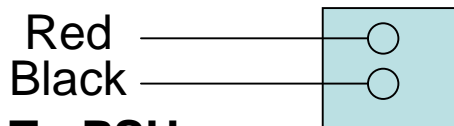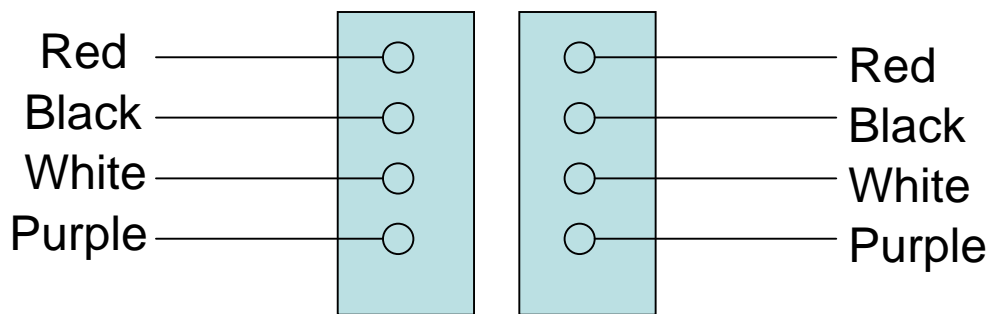


To PSU

Provided

Next Monitor if required

EXTERNAL PANEL CONNECTIONS

Internal Monitor

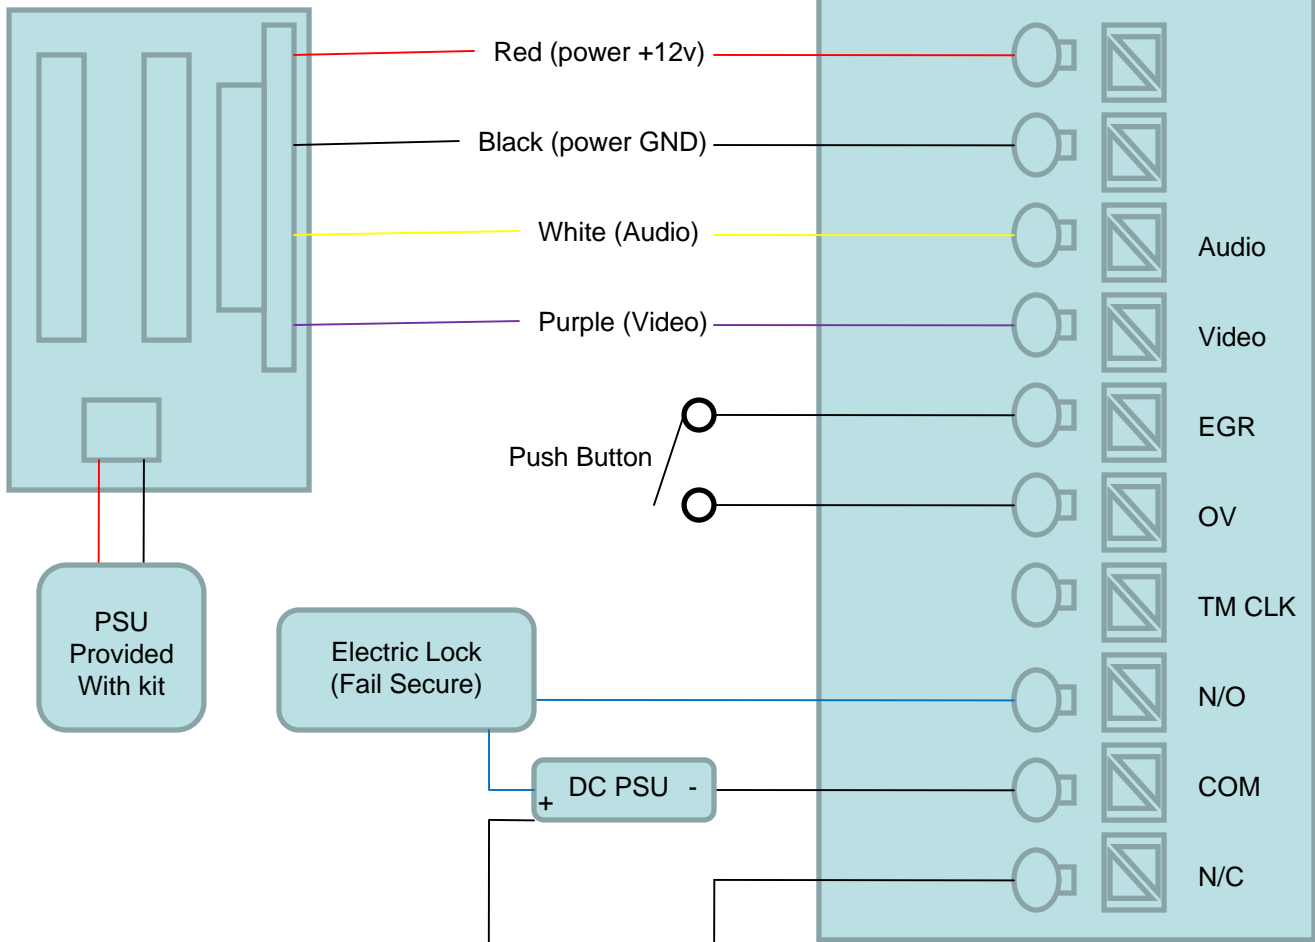

NOTE;
Power supply used to power the lock or magnet is not provided with the kit.

External Keypad And Camera

SYSTEM CONNECTIONS

Cable:

Minimum :- 4 core cable required

A cable core diameter of no less than 0.5mm

The longest cable distance between the outdoor panel and the last monitor is no more than 30m.

Cable configuration:-

Power - Red


GND - Black

Audio - White

Video - Purple

***Note: Do not use STP cable**

System Wiring Diagram

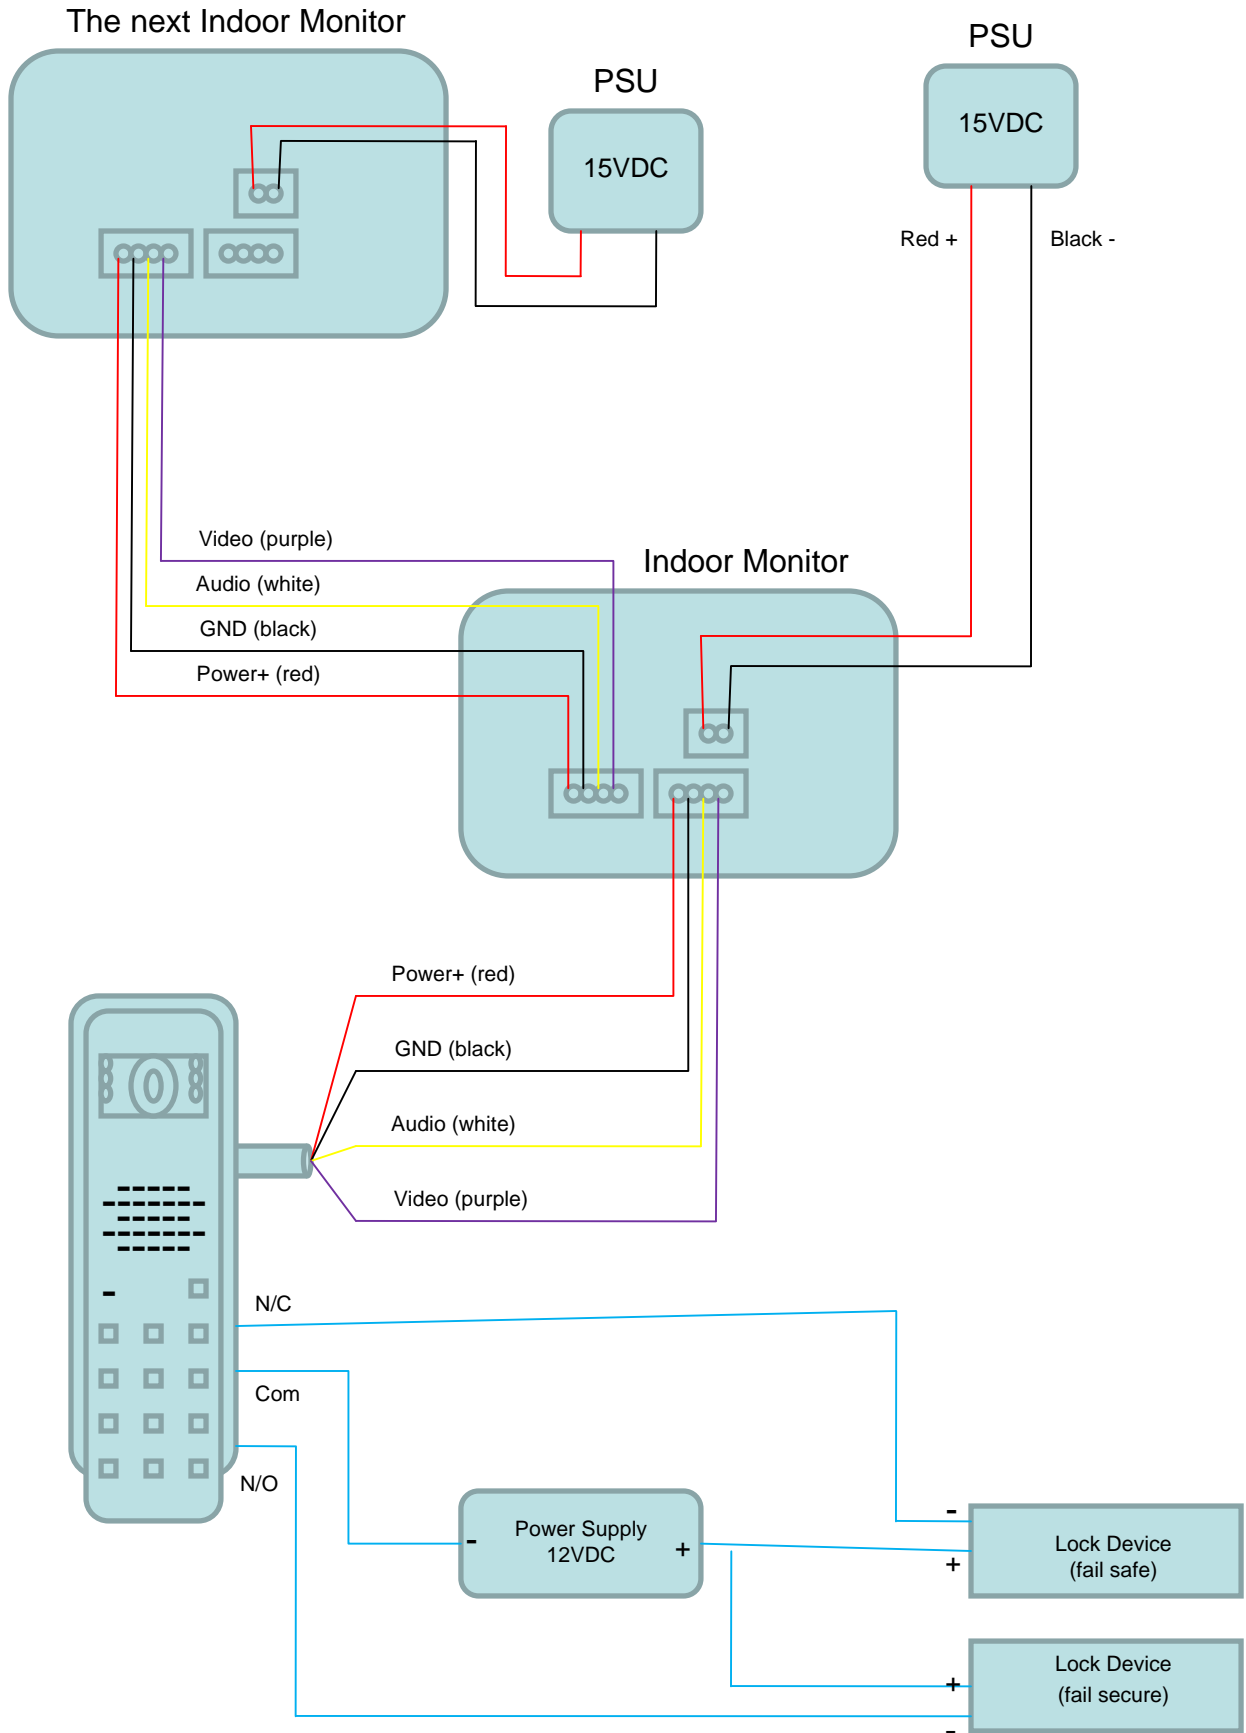





58mm

Outdoor panel Dimensions

77.5mm

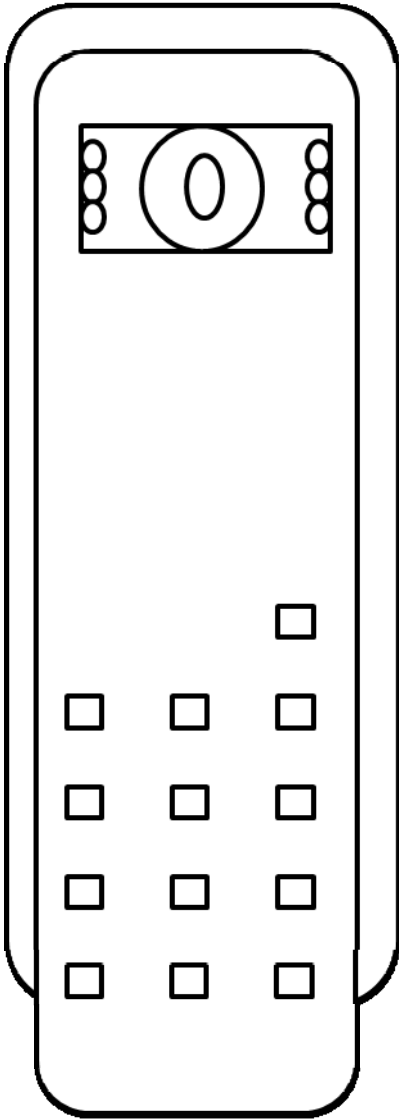

69mm

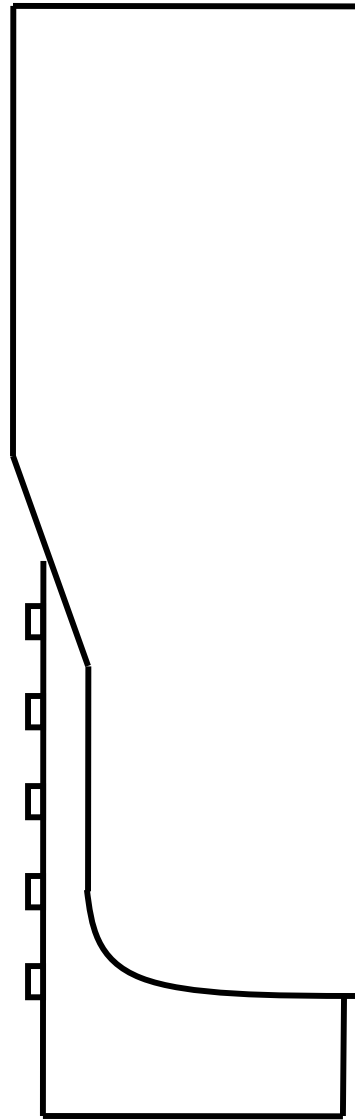

182mm

42.5mm

Keypad Programming Instructions

Factory set master code is 1234

Entering Programming Mode

Press the * (star) button followed by your 4 digit master code.

A tone will be heard and red LED will start to flash, once the LED is flashing you are now in programming mode.

To exit programming mode press the *(star) key.

Adding User Codes

Firstly enter programming mode.

Then enter a location 01 to 40 (31 – 40 are the latching code locations).

Enter the desired 4 digit user code, a confirmation tone will be heard.

Press * (star) to exit programming.

Setting The Lock Time

The unit is factory set to 5 seconds, if the time needs changing, firstly enter programming mode.

Enter location 00

Enter desired lock operation time in a two digit format e.g. 09 for 9 seconds, 30 for 30 seconds up to a max of 99 seconds

Press *(star) to exit programming.

Installation

- 1.The outdoor station and the indoor monitor should be positioned between 150cm and 175cm from the ground.
- 2.The outdoor station should not be installed near equipment, such as a TV set, video recorder or a computer system.
- 3.Do not open the back of the indoor monitor as it is dangerous and all warranties will be void.
- 4.Never shake, drop or throw the indoor monitor.
- 5.Power must be off whilst installing.

